
Honda Insight 2010/11 Fitting

Converter wiring



Identifying Vehicle can bus Wiring

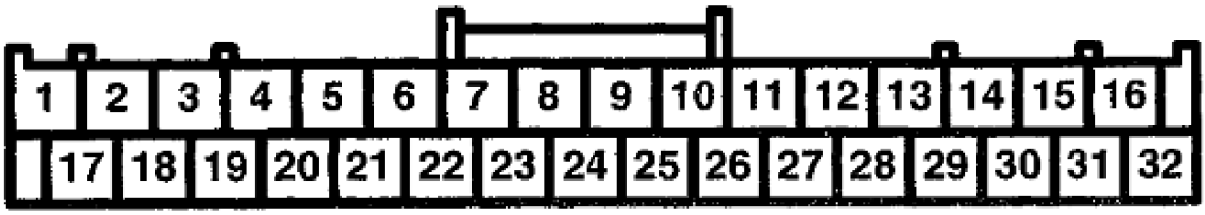

Gain access to back of clock there will be a Red and White twisted pair of wires connected to one of the plugs in back of clocks

Cut twisted pair of wires one at a time approx 4 cm from plug and taking care not to let the wires short to anything even each other

Twited Pair

White wire of vehicle = Can High = pin 20

Red wire of vehicle = Can Low = pin 19

Loom side

Connect the Yellow wire of converter to the cut White wire Loom side.
Connect the White wire of converter to the cut Red wire Loom side.

Clock side

Connect the Green wire of converter to the cut White wire Clock side.
Connect the Blue wire of converter to the cut Red wire Clock side.

Connect Red wire of converter to 12v and Black wire of converter to GND

If you need any advice please give me a call 07951178250