Mazda 5 Converter wiring


Red =12v Black=GND

Loom side	Clock side
Yellow Can-H	Green Can-H
White Can-L	Blue Can-L

www.kbtv.co.uk

Identifying can bus Wiring

Cut wires one at a time approx 4 cm from plug and taking care not to let the wires short to anything

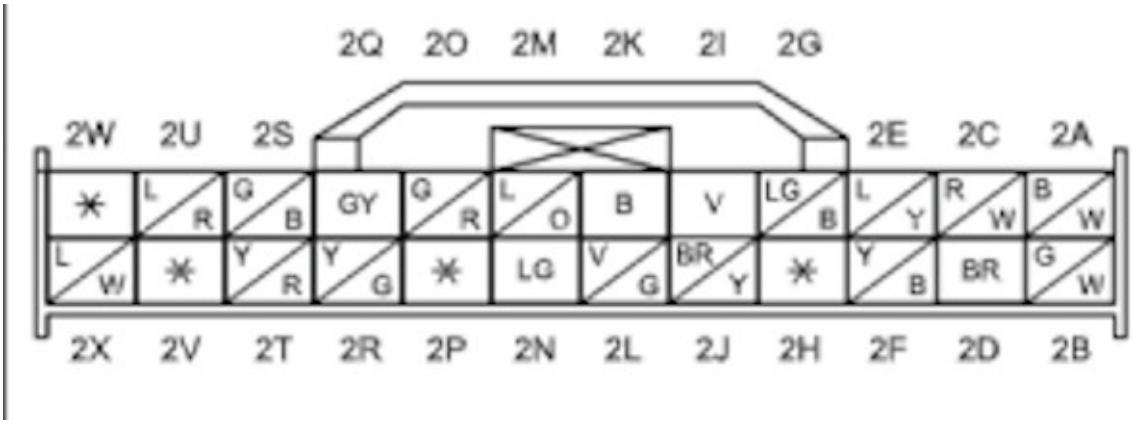

Brown wire of vehicle = Can Low = pin 2D

Green/White wire of vehicle = Can High = pin 2B

Loom side

Connect the Yellow wire of converter to the cut Green/White wire Loom side.
Connect the White wire of converter to the cut Brown wire Loom side.

Clock side


Connect the Green wire of converter to the cut Green/White wire Clock / plug side.
Connect the Blue wire of converter to the cut Brown wire Clock / plug side.

Conect Red wire of converter to 12v and Black wire of converter to GND

If you need help Please call 07951178250

INSTRUMENT CLUSTER

0922-1a

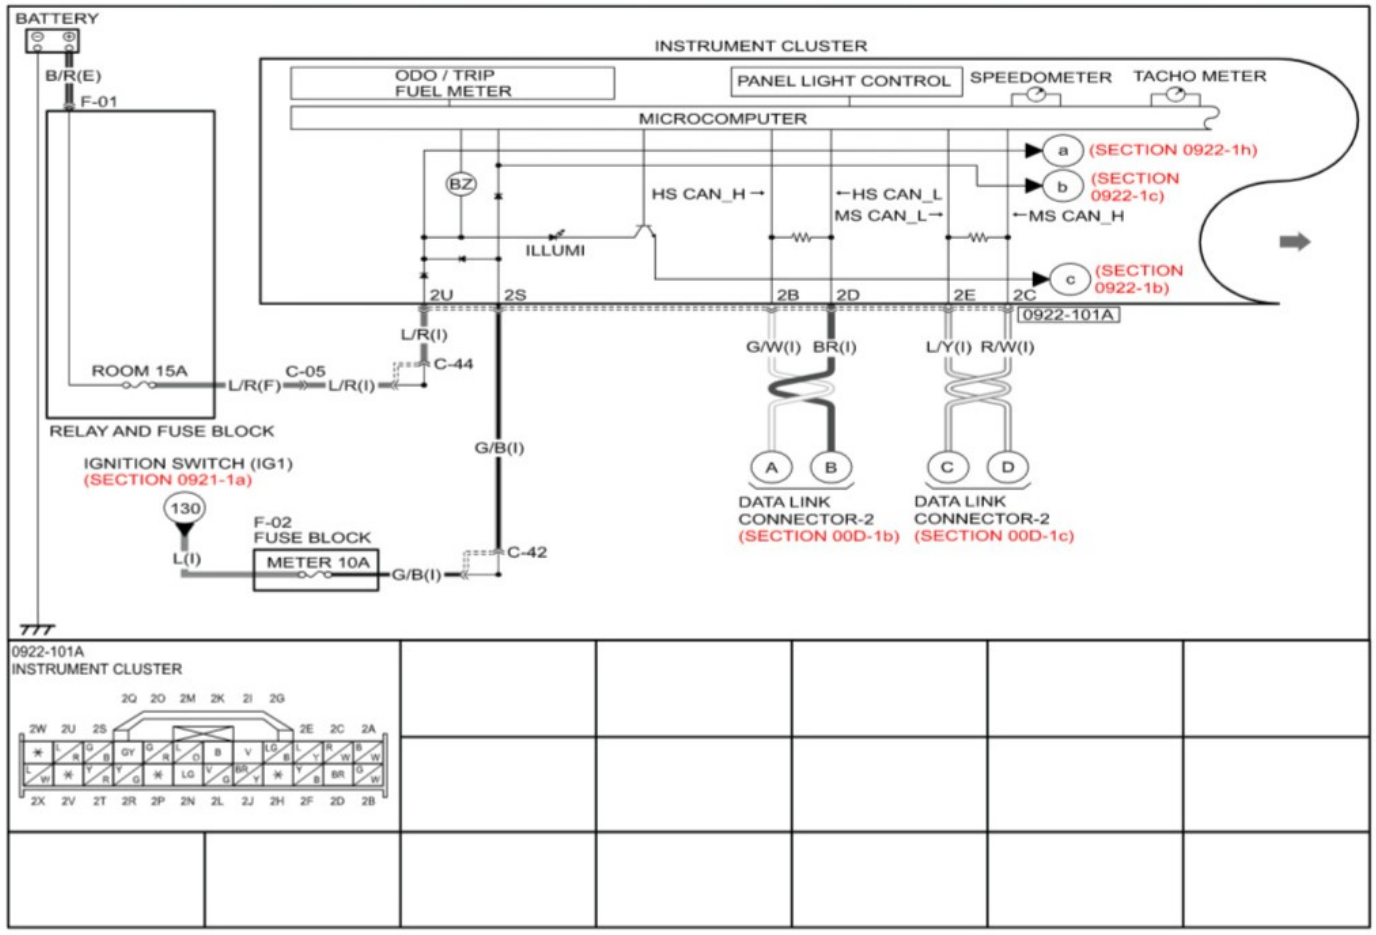

0922-101A
INSTRUMENT CLUSTER

cardiagn.com