
Nissan 370z Fitting

Converter wiring



370z Identifying can bus Wiring

The can bus wires will be twisted together ,cut wires one at a time approx 4 cm from plug and taking care not to let the wires short to anything

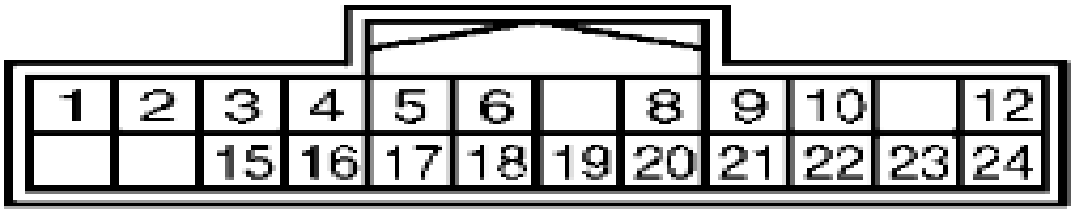

Pink wire of vehicle = Can Low = pin 22
Blue wire of vehicle = Can High = pin 21

Loom side

Connect the Yellow wire of converter to the cut Blue wire Loom side.
Connect the White wire of converter to the cut Pink wire Loom side.

Clock side

Connect the Green wire of converter to the cut Blue wire Clock / plug side.
Connect the Blue wire of converter to the cut Pink wire Clock / plug side.

Connect Red wire of converter to 12v supply
Connect Black wire of converter to GND

If you need help call 07951178250