Nissan E52 Fitting

Converter wiring


Red =12v Black=GND

Loom side	Clock side
Yellow Can-H	Green Can-H
White Can-L	Blue Can-L

www.kbtv.co.uk

E52 Identifying can bus Wiring

Cut wires one at a time approx 4 cm from plug and taking care not to let the wires short to anything

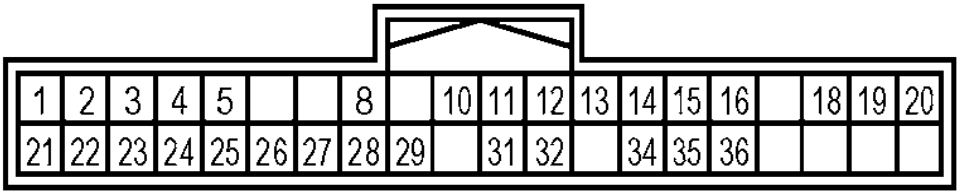

Pink wire of vehicle = Can Low = pin 22
Blue wire of vehicle = Can High = pin 21

Loom side

Connect the Yellow wire of converter to the cut Blue wire Loom side.
Connect the White wire of converter to the cut Pink wire Loom side.

Clock side

Connect the Green wire of converter to the cut Blue wire Clock / plug side.
Connect the Blue wire of converter to the cut Pink wire Clock / plug side.

Connect Red wire of converter to permanent 2v and Black wire of converter to GND

If you need help Please call 07951178250