
Toyota Alphard/Vellfire 2015+
Converter wiring



Identifying can bus Wiring on vehicle

The can wires on vehicle are the twisted pair of Yellow and White wires at the back of clocks.

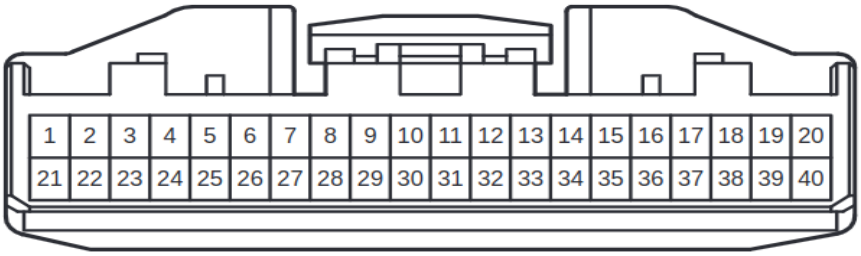

Twisted pair
Yellow wire of vehicle = Can High = pin 23
White wire of vehicle = Can Low = pin 22

Cut wires one at a time approx 4 cm from plug and taking care not to let the wires short to anything.

Loom side Connections


Connect the Yellow wire of converter to the cut Yellow wire of vehicle Loom side.
Connect the White wire of converter to the cut White wire of vehicle Loom side.

Clock side Connections

Connect the Green wire of converter to the cut Yellow wire of vehicle Clock side.
Connect the Blue wire of converter to the cut White wire of vehicle Clock side.

Connect Red of converter to 12v and Black of converter to GND

If you need help call 07951178250

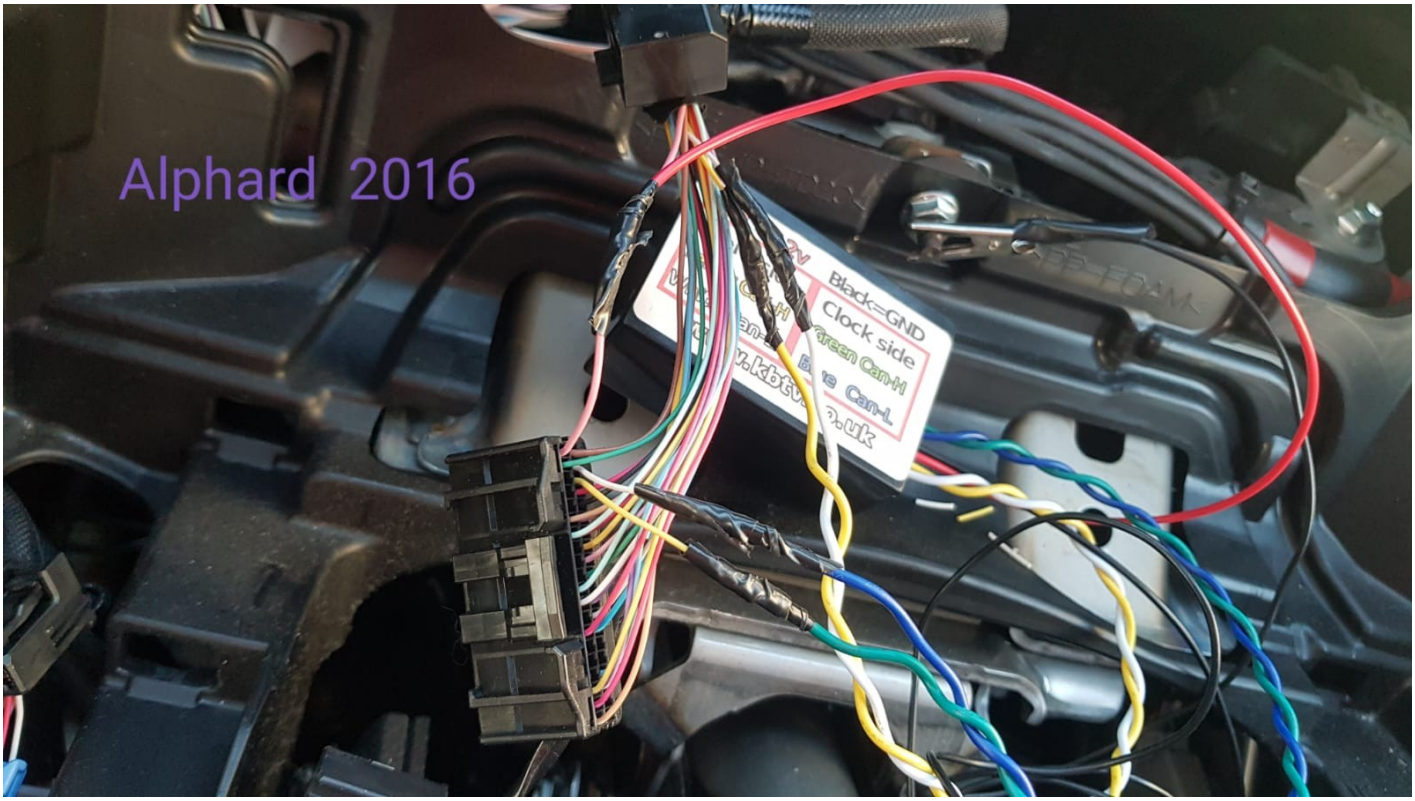
Alphard 2016
Black=GND
Clock side
Green Can-H
Can-L