KBTV SPEEDO CONVERTER / DELIMITER

MODEL: **Mark x**

LOCATION: **SPEEDO HEAD**

Remove the Speedo Head, then install the Speedo Converter as described below

1. Cut the SIGNAL wire

2.Connect the YELLOW wire from the Speedo Converter to the Signal wire from the Loom

3. Connect the GREY wire from the Speedo Converter to the Signal wire on the Speedo Head Connector

4.CUT the SIGNAL OUT wire. Disregard the connector end and connect the LOOM end to the YELLOW of the Converter (see diagram)

5. Connect the RED wire to the 12V+

6. Connect the BLACK wire to the 0V- (Neg/Earth)


7. All connections should be soldered and insulated.

8. Insulate the unused GREEN wire


VEHICLE COLOUR CODES CODES AND LOCATION

	ROW	PIN	COLOUR
SIGNAL WIRE	Front row in pic	5th from right	Pink
12V+	Front row in pic	1st from right	Yellow
0V- Neg/Earth			
SIGNAL OUT	Back row in pic	5th from right	white hint of blue/grey

Connection of Speedo Converter behind the Speedo Head

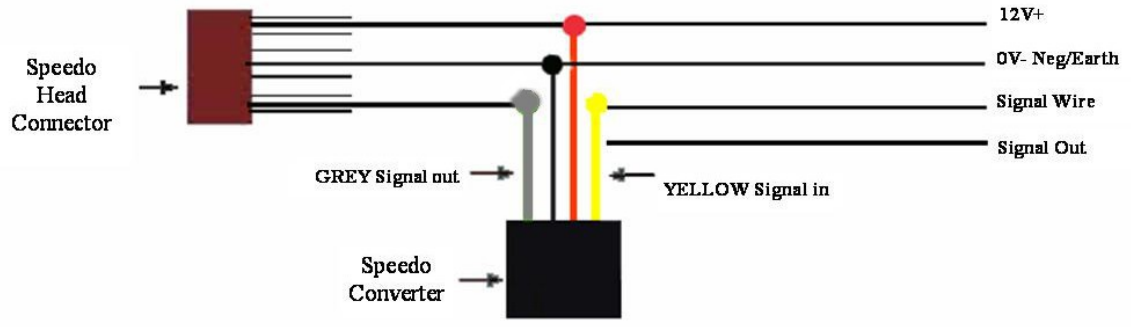

For help 07951178250

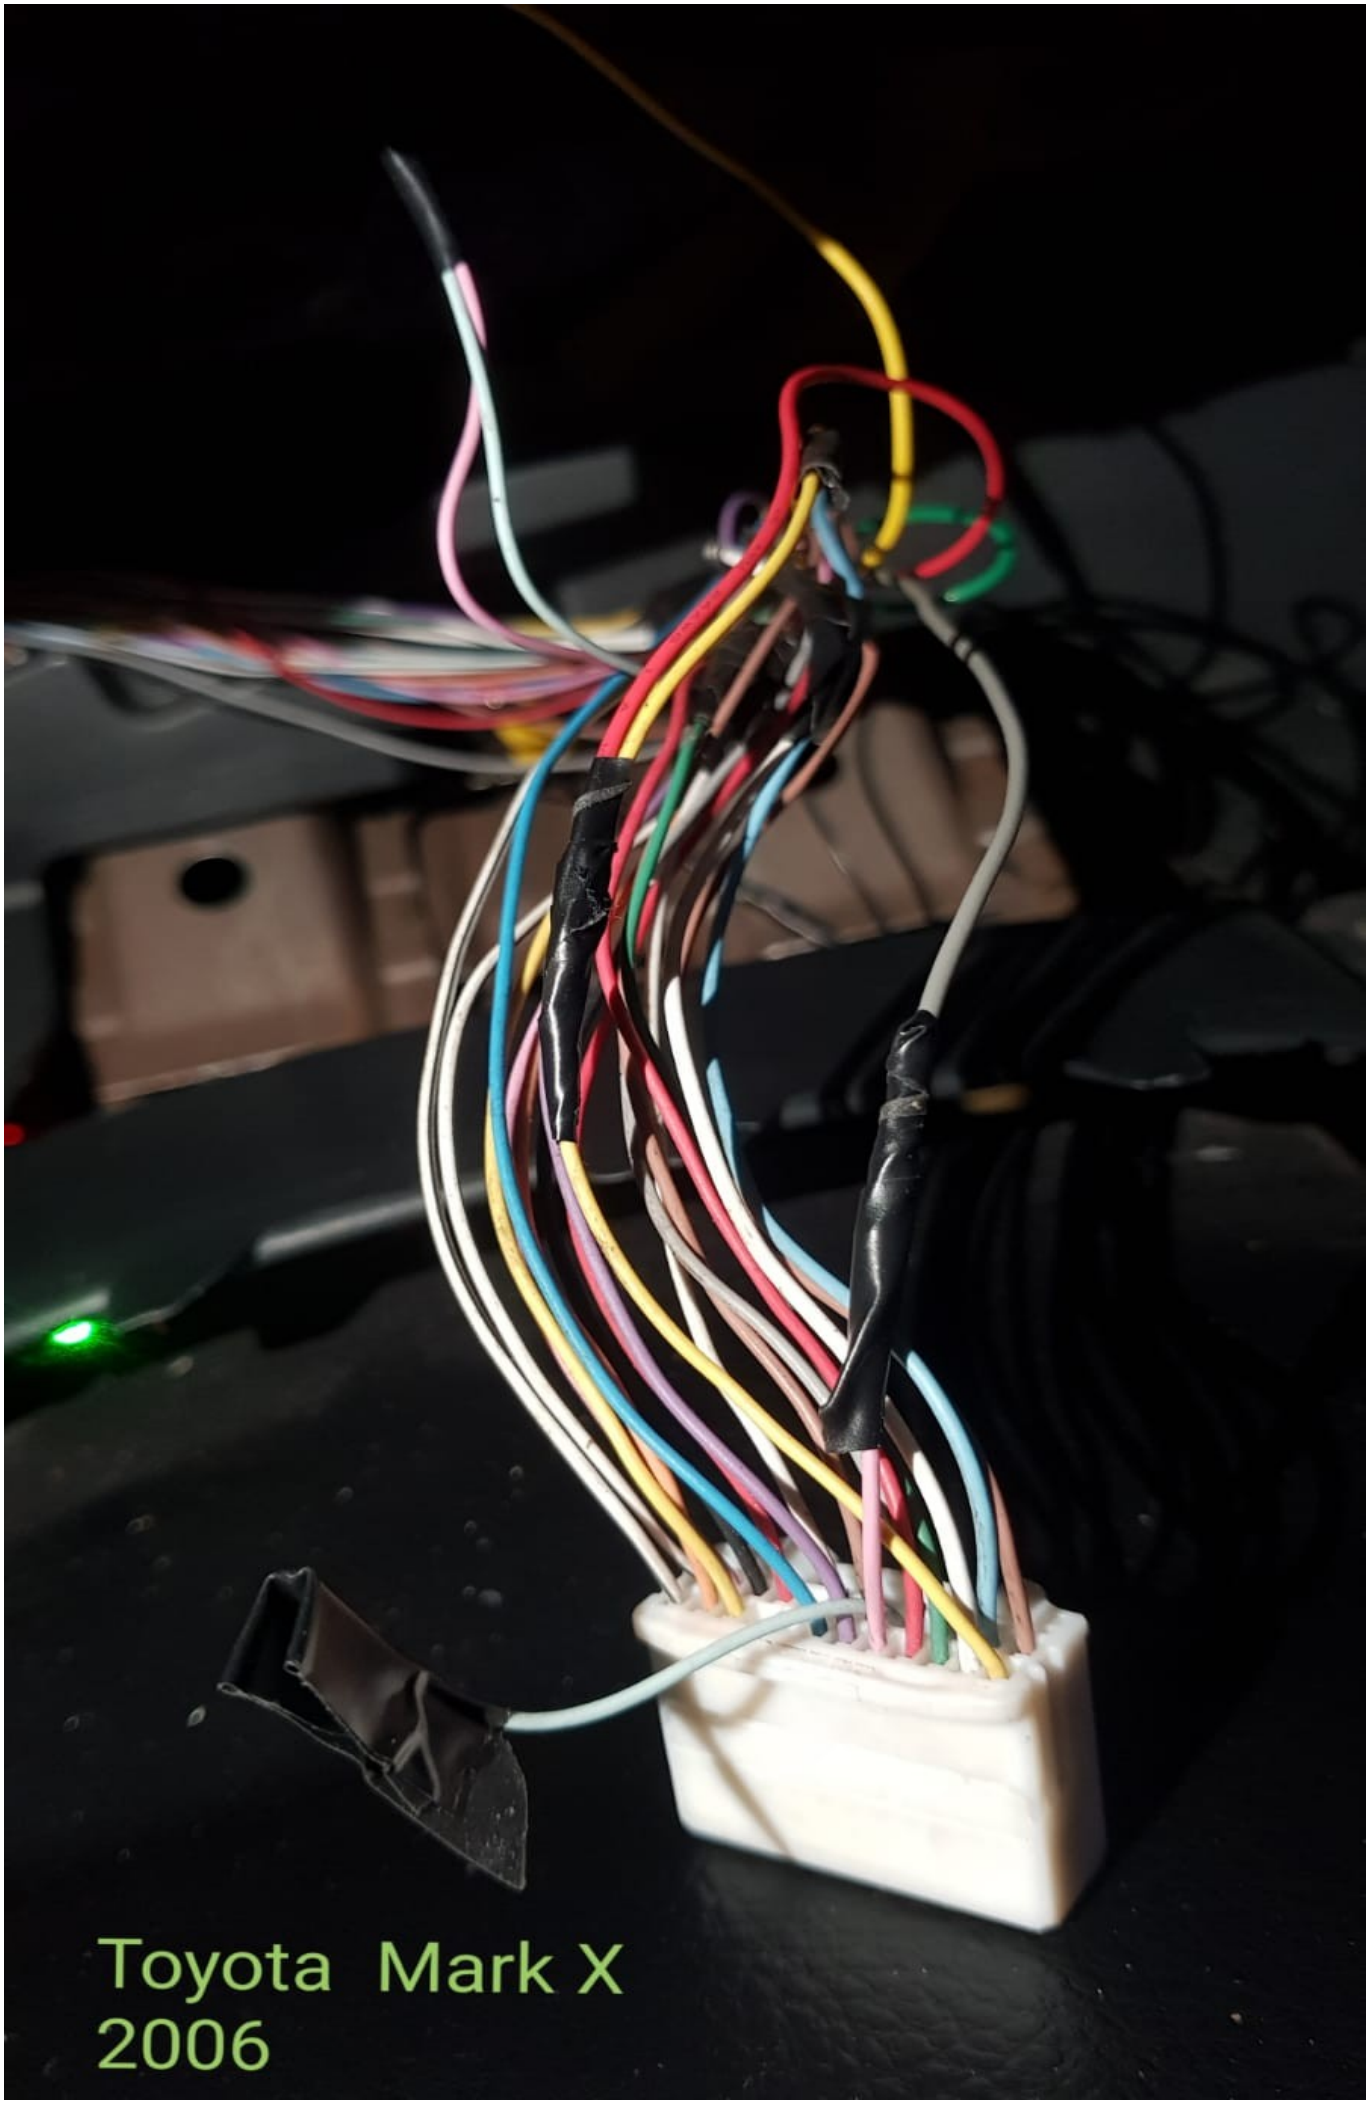
Toyota Mark X
2006