KBTV Converter / Delimiter

MODEL: **Toyota Wish 2008**

LOCATION: **SPEEDO HEAD**

Remove the Speedo Head, then install the Speedo Converter as described below

1. Cut the SIGNAL wire

2.Connect the YELLOW wire from the Speedo Converter to the Signal wire from the Loom

3. Connect the GREY wire from the Speedo Converter to the Signal wire on the Speedo Head Connector

4. CUT the SIGNAL OUT Wire Disregard the connector end and connect the loom end to the YELLOW Wire of the Speedo Converter (see diagram).

5. Connect the RED wire to the 12V+

6. Connect the BLACK wire to the 0V- (Neg/Earth)


7. All connections should be soldered and insulated.

8.Inulate the unused GREEEN Wire


VEHICLE COLOUR CODES CODES AND LOCATION

	CONNECTOR	ROW	PIN	COLOUR
SIGNAL IN WIRE	WHITE	Catch side	7th space from left	Blue/orage stripe
12 V +	WHITE	Catch side	Ist from left	Pink/Blue stripe
0 v - Neg/earth	WHITE	GND	GND	GND
SIGNAL OUT WIRE	WHITE	Catch side	6th space from left	Blue/white dots

Connection of Speedo Converter behind the Speedo Head

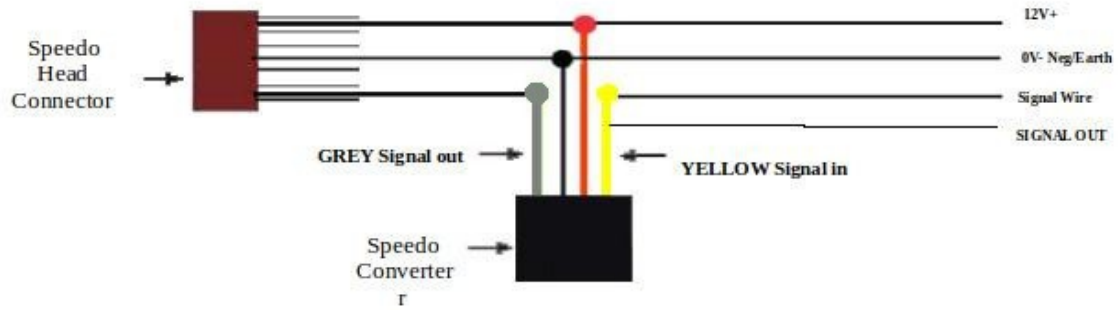

www.kbtv.co.uk

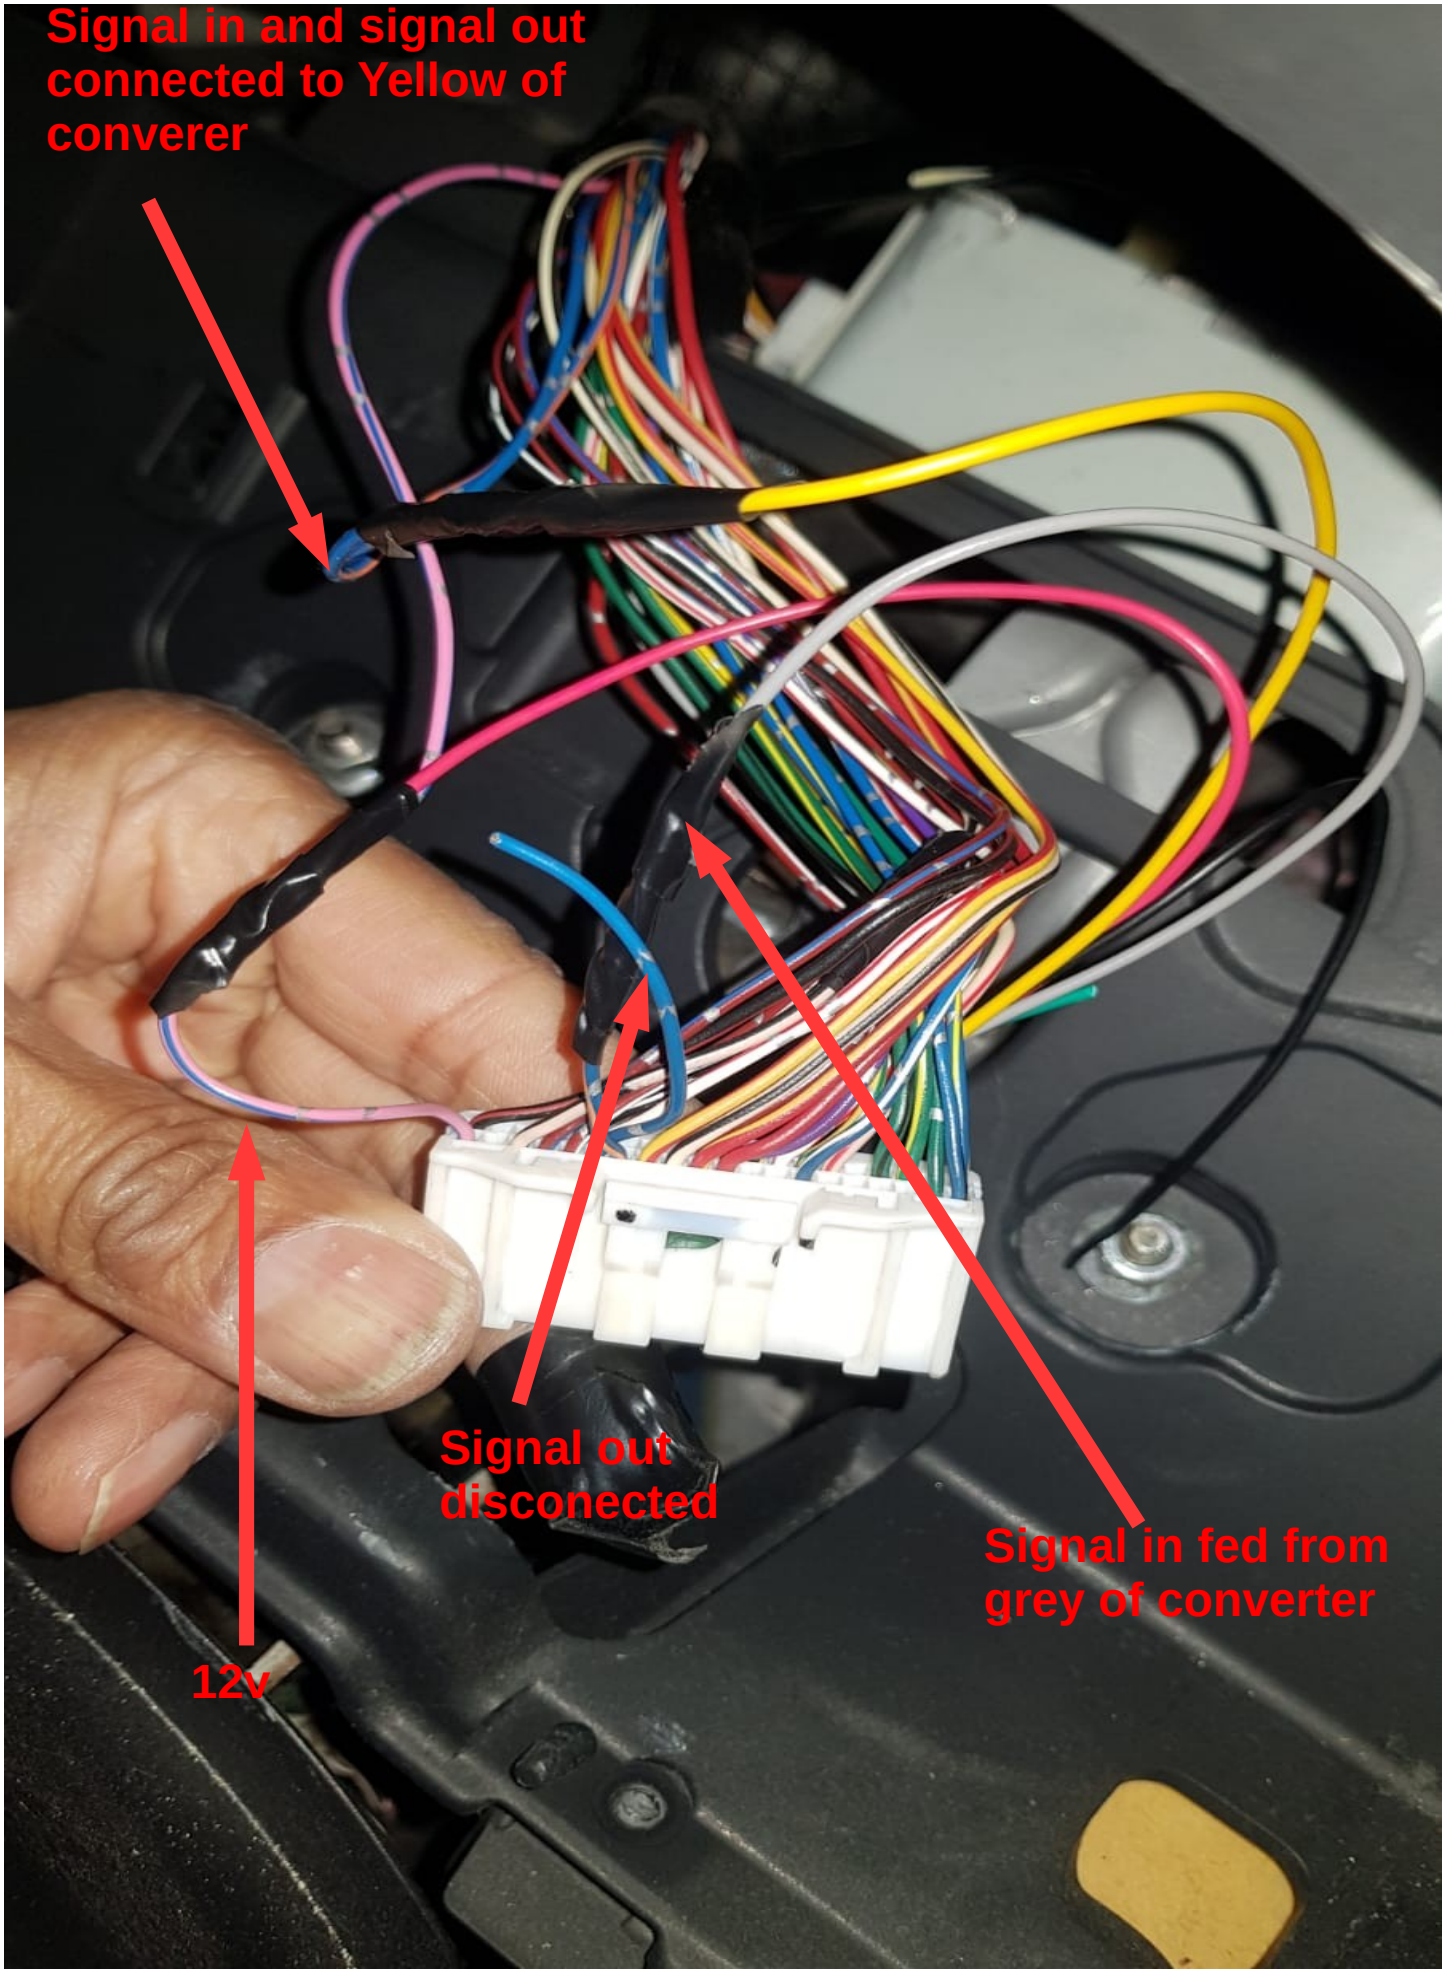
Signal in and signal out connected to Yellow of converer
Signal out disconected
Signal in fed from grey of converter
12v